




## Operation of the PL150 Pallet Load Ice Merchandiser

**Adhering to the following guidelines for the proper operation and use of the Leer PL150 Pallet Load Ice Merchandiser ensures the safety of your staff and customers while preserving the highest quality of ice.**

### **Proper Operation – Unloading / Loading Ice**

- **Prior to Unloading / Loading:**
  - Verify proper installation techniques were followed:
    - Ensure power is on by checking switch.
    - Dedicated 20amp circuit
    - Do not use extension cords.
    - Check the unit is already cold from displayed temperature.
  - If the unit did installation did not adhere to the proper techniques, immediately remove all ice from the unit and store it in cold storage.
- **Unloading Current Contents**
  - Unloading and loading should be completely quickly to limit the amount of warm air entering the unit and in result melting ice.
  - Open large service doors
  - Remove factory supplied metal base pallet with pallet jack.
  - Search for ripped bags or lose ice in or around the unit. Remove and dry any wet areas.
- **Loading New Pallets**
  - Unloading and loading should be completely quickly to limit the amount of warm air entering the unit and in result melting ice.
  - The PL150 Pallet Load Ice Merchandiser must always be used with the factory supplied metal base pallet. Failure to do so and improper use of the Ice Merchandiser will result in damage to the unit and risk of ice melting.
  - Place pallet of ice on base pallet.
  - Open large service doors
  - Slowly wheel in new pallet of ice, on the metal base pallet, into the unit.
    - The metal base pallet should sit flush with the metal base of the unit with no gaps.
  - Extra ice from the previous pallet should be added to the top of the stack of ice, not overloaded on the side.
    - Do not stack higher than the air ducts, or 6 inches from internal fans.
  - Verify no loose ice cubes.
  - Mop floor after use.

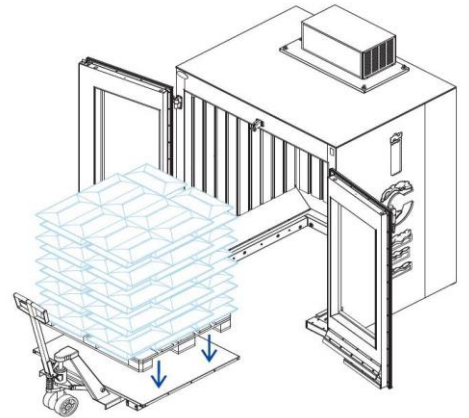

2540001